




## 7. SGH-E630 Flow Chart of Troubleshooting

### 1. Power On

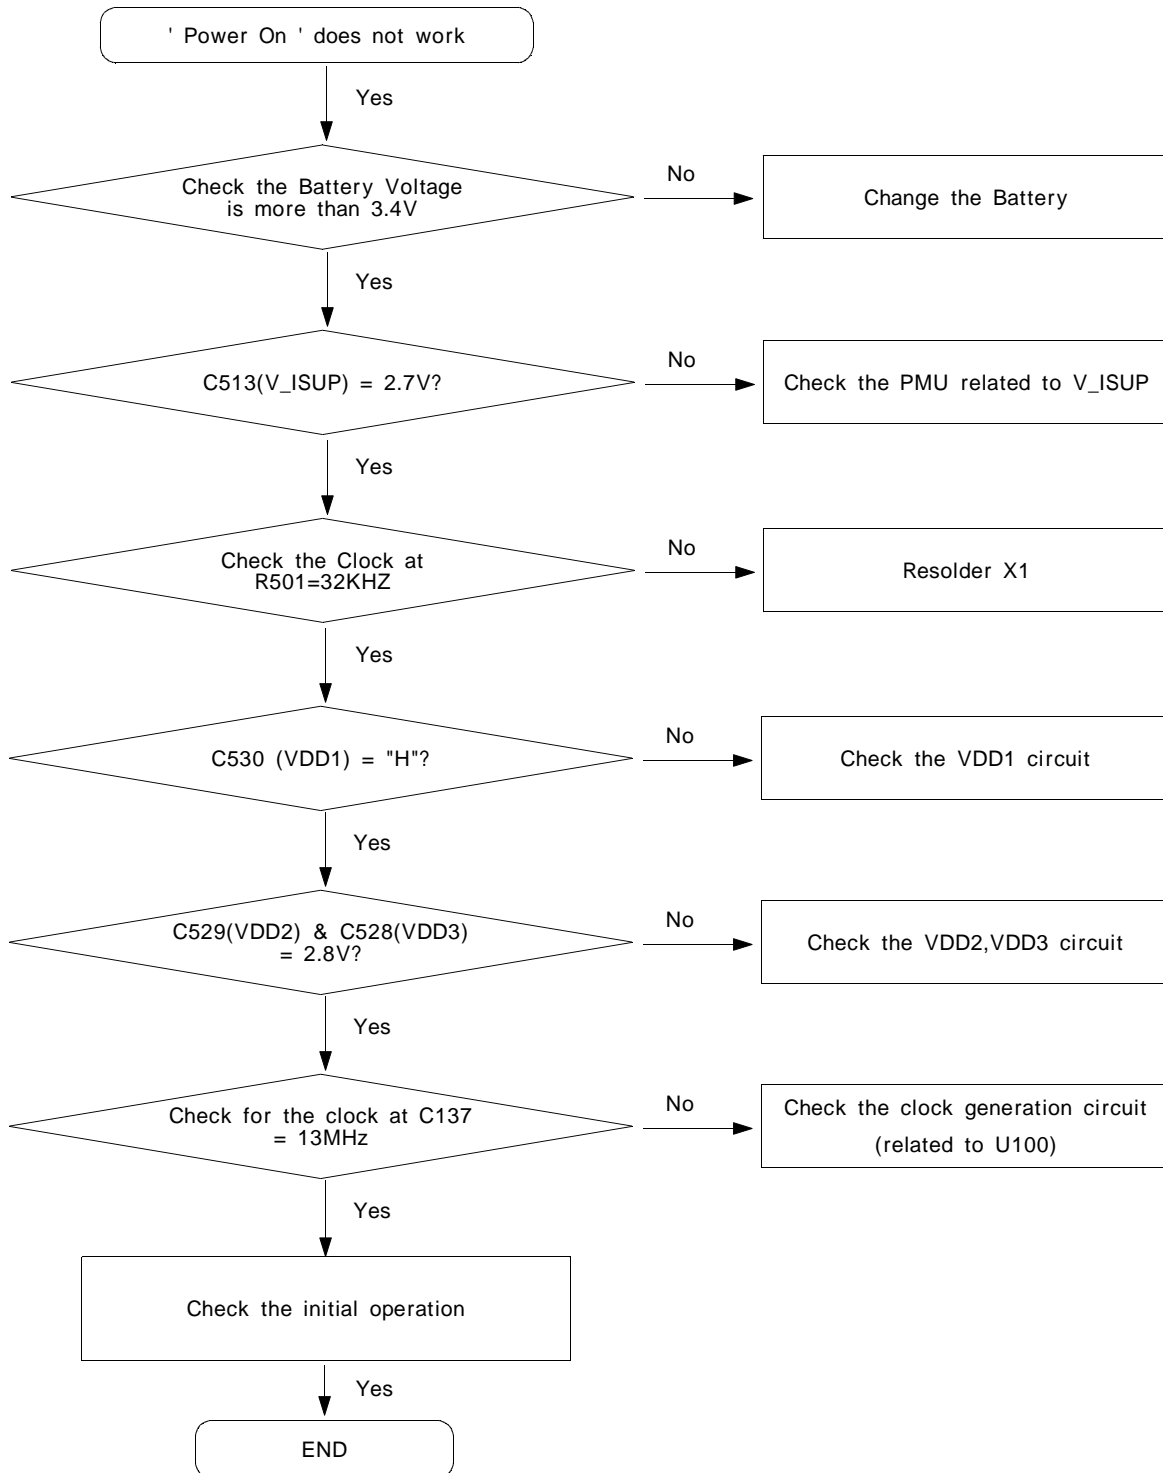


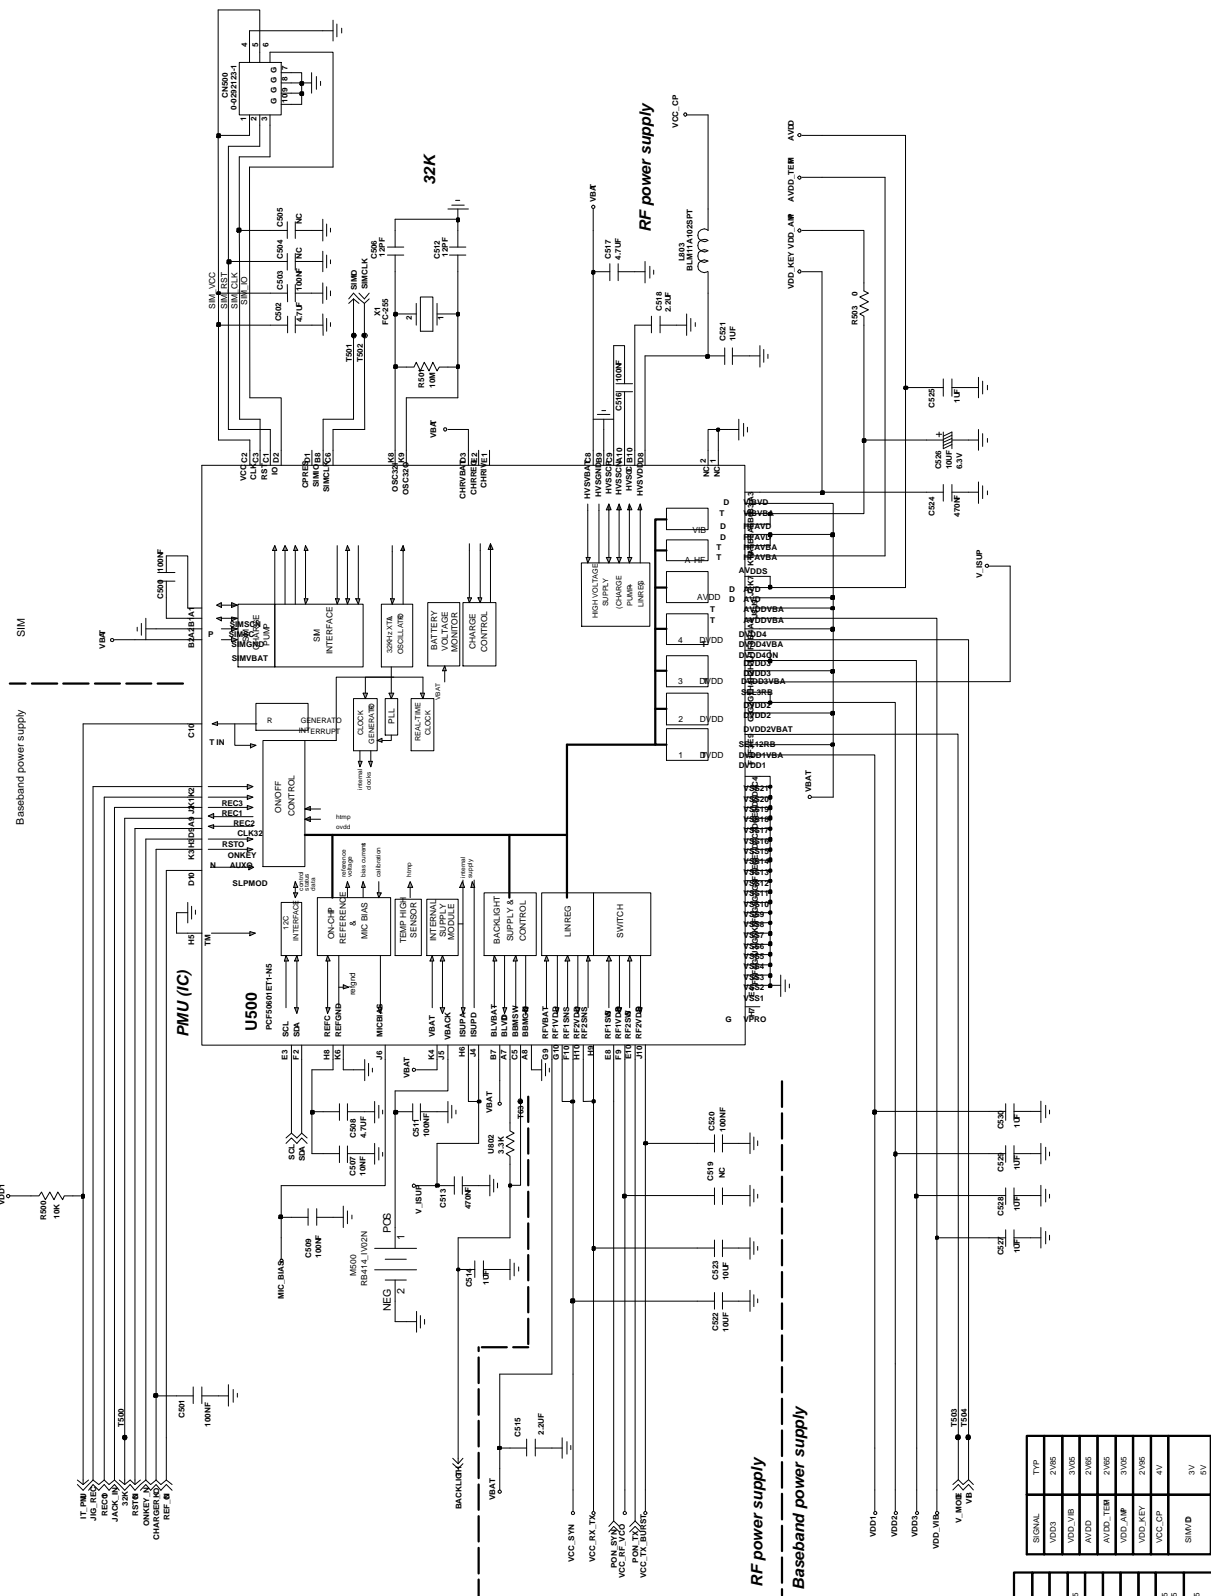


## 2. Initial

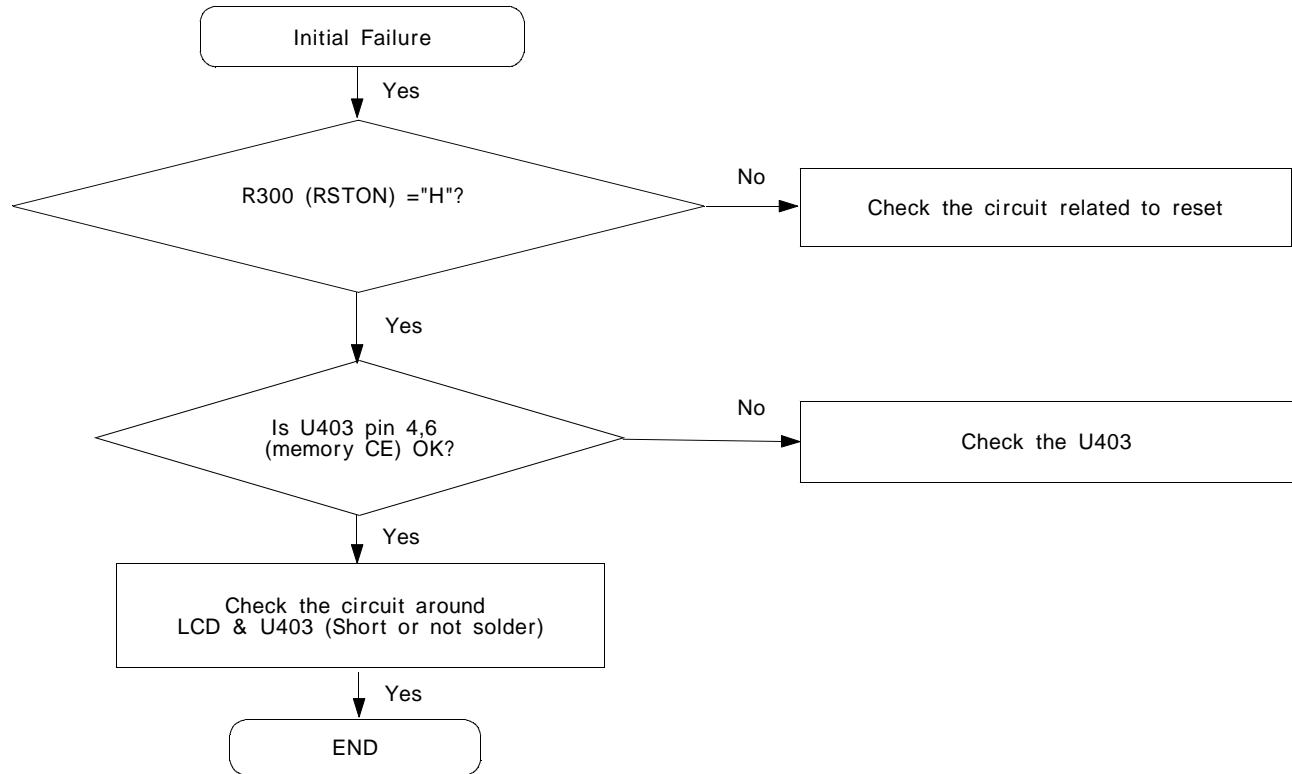


Initial

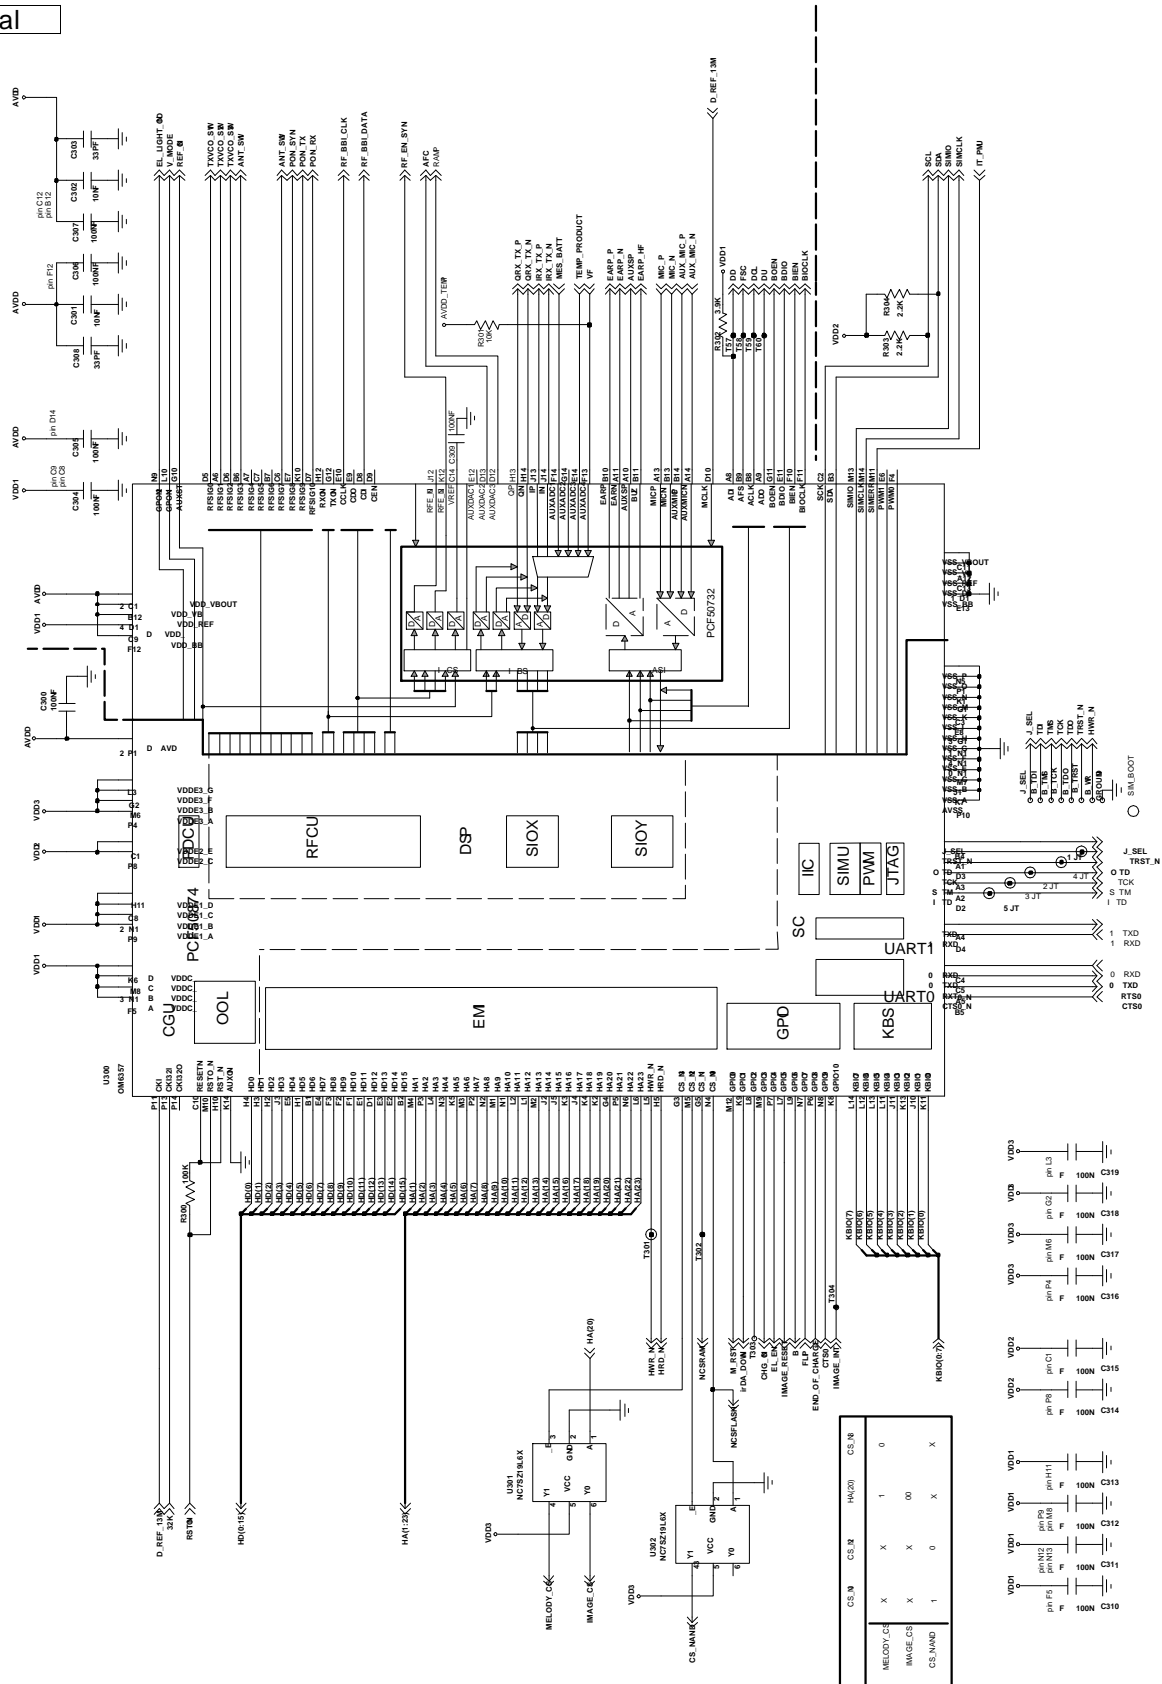


### 3. Charging Part

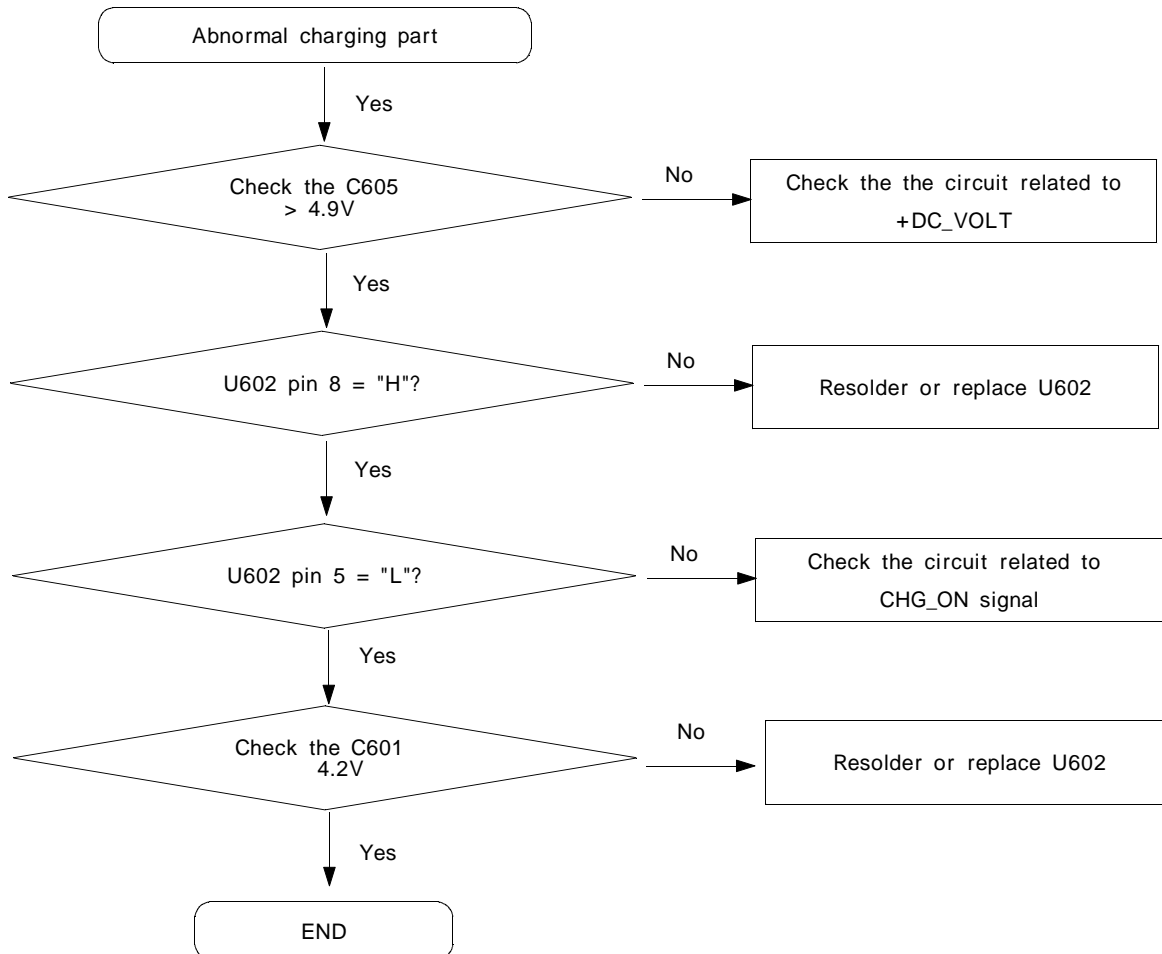


Charging

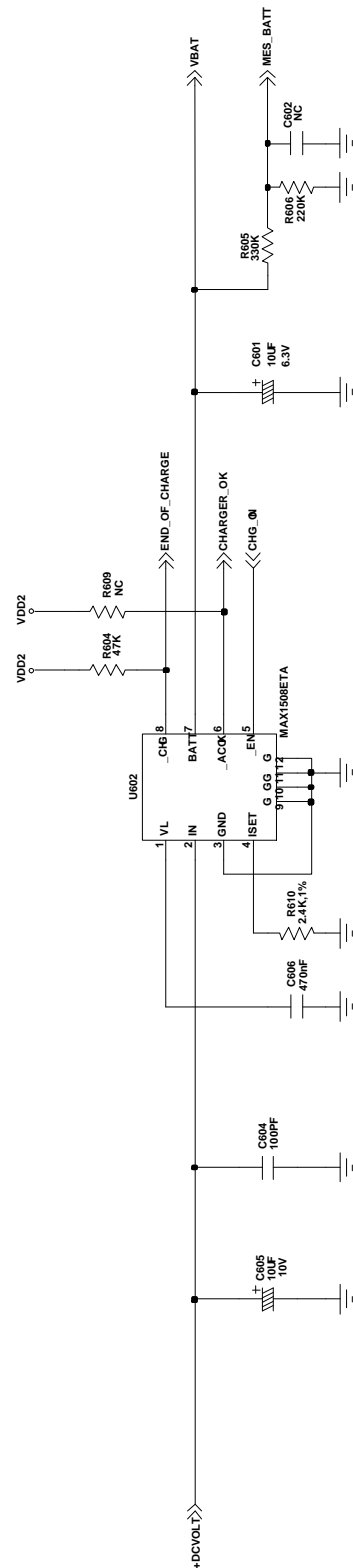

#### 4. Sim Part

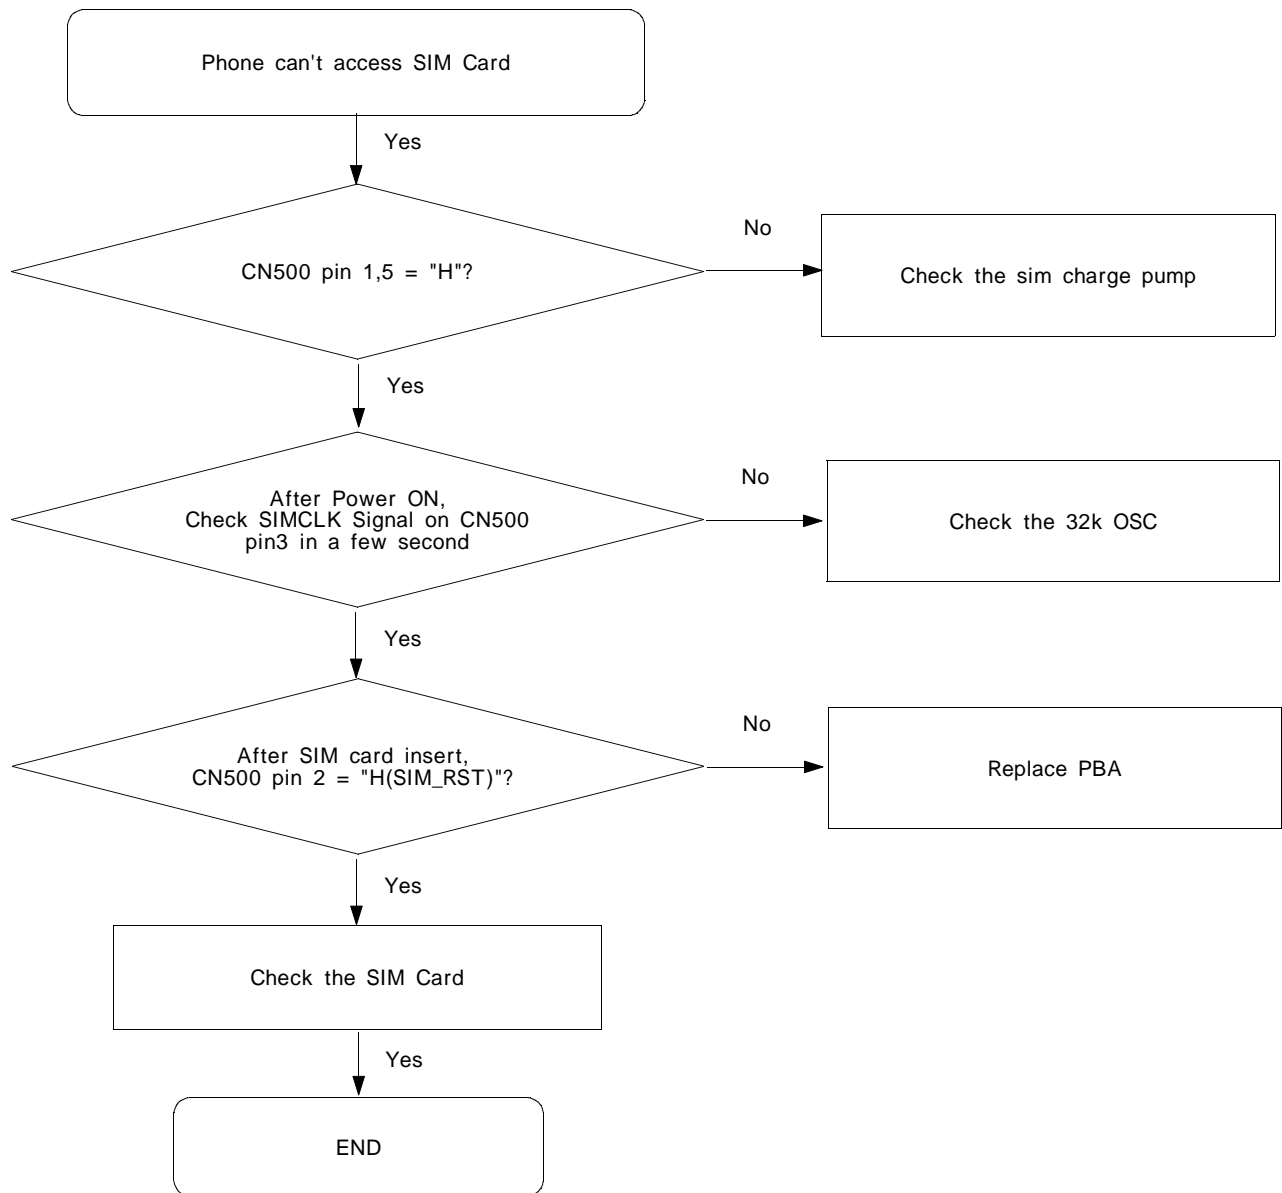


## 5. Microphone Part

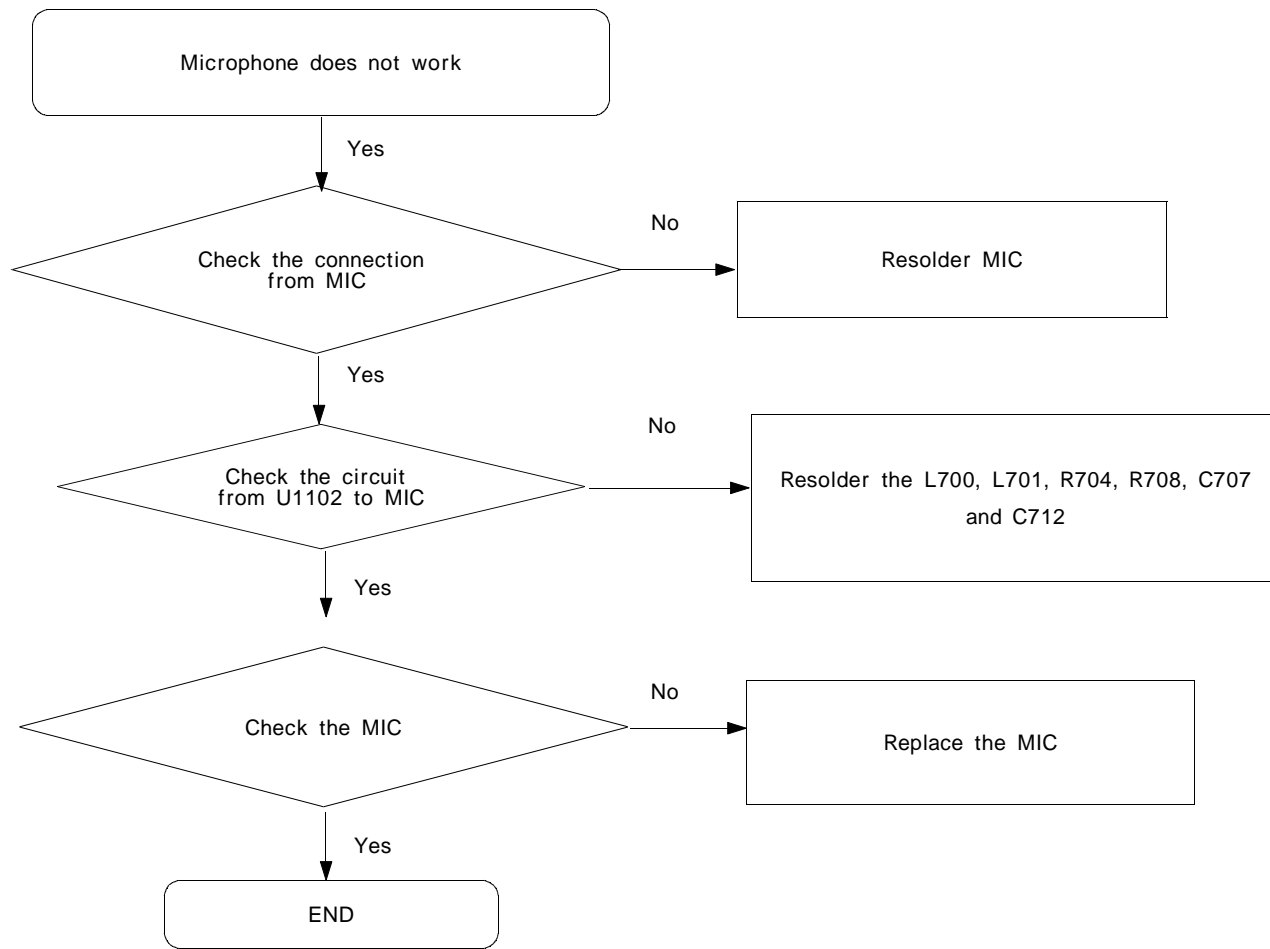





## Microphone

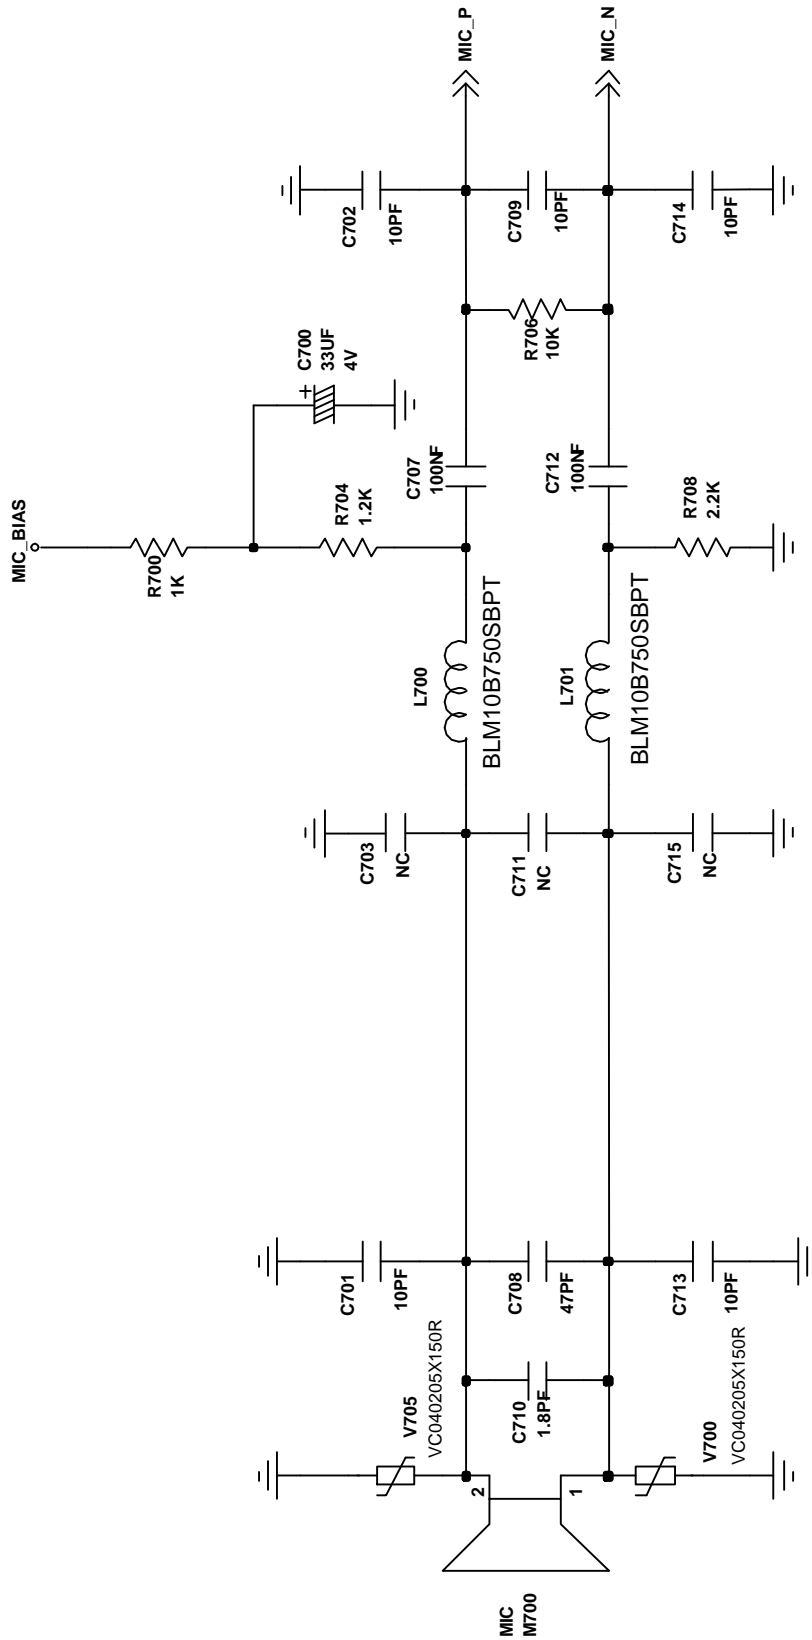


## 6. Speaker Part(Melody)

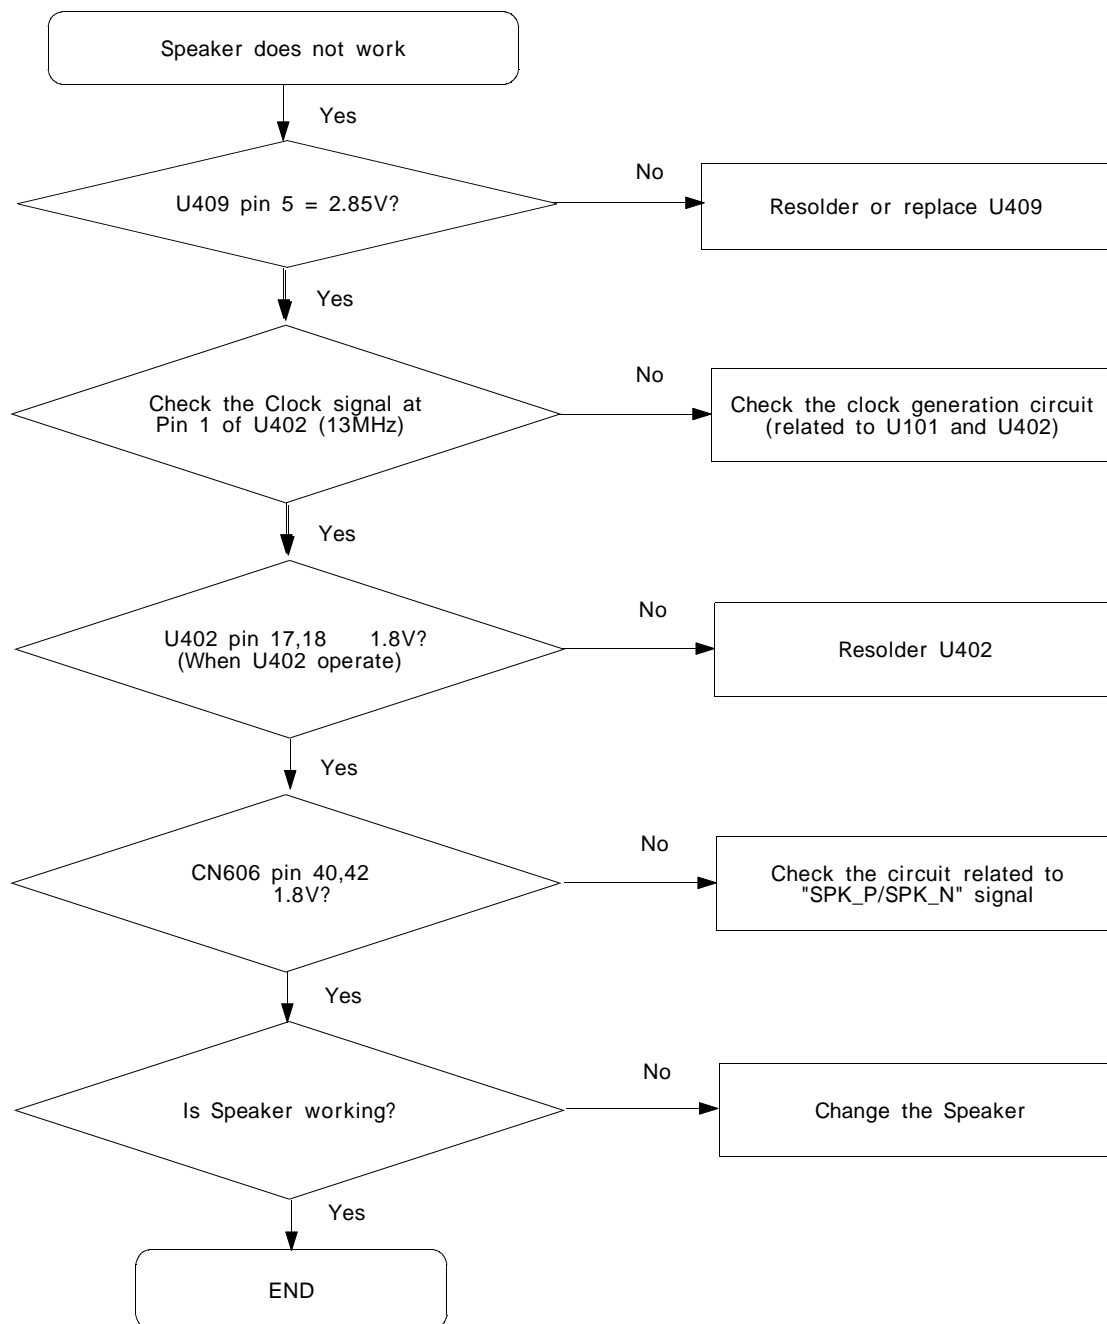


## Speaker

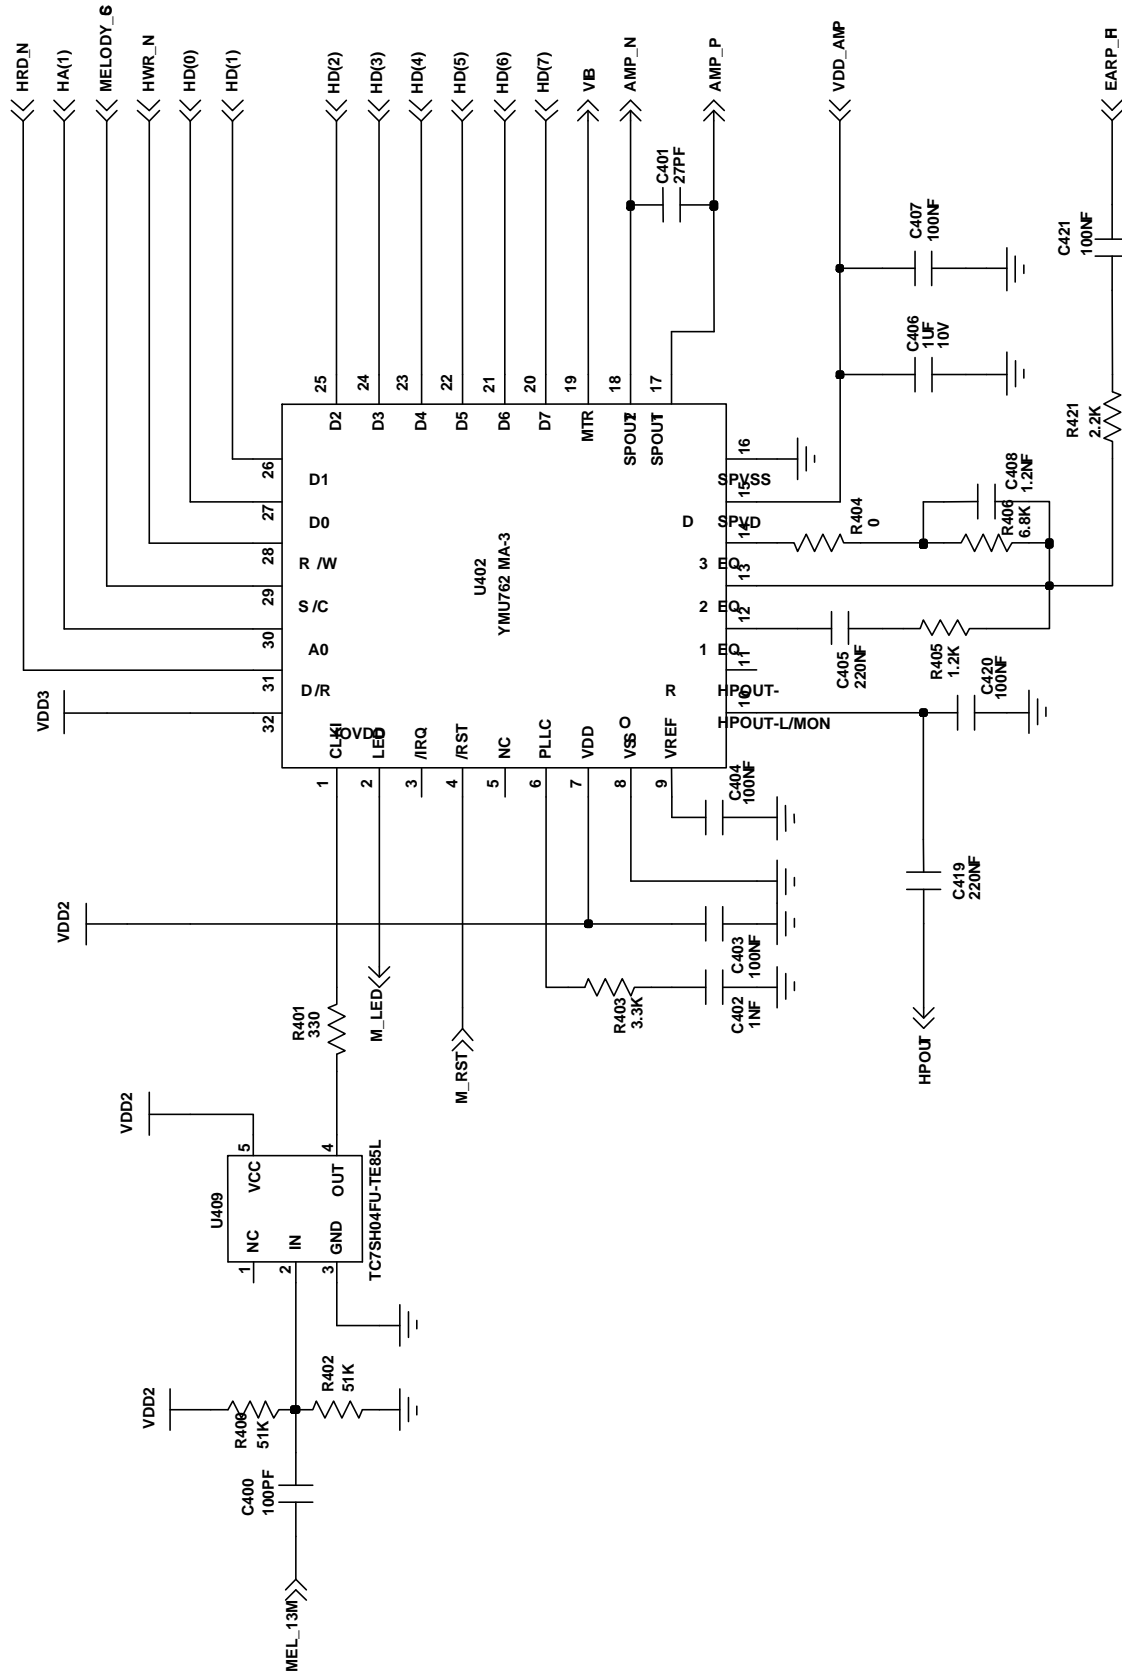


## 7. Key Data Input

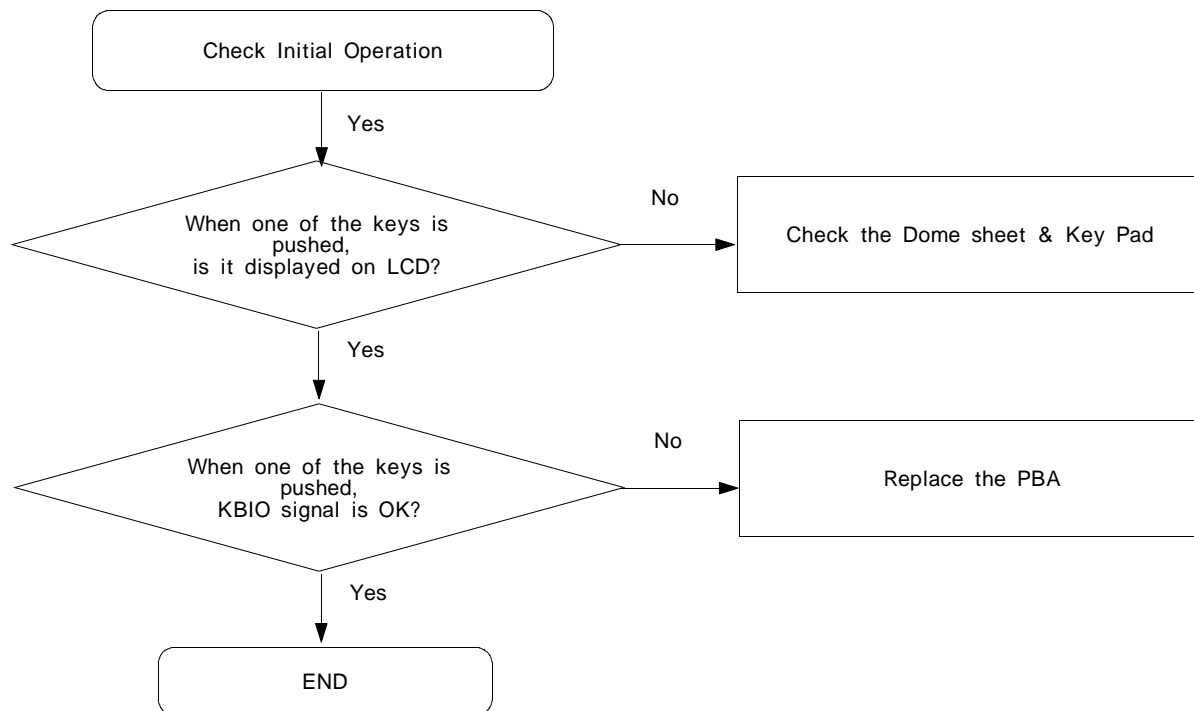

## 8. Receiver Part

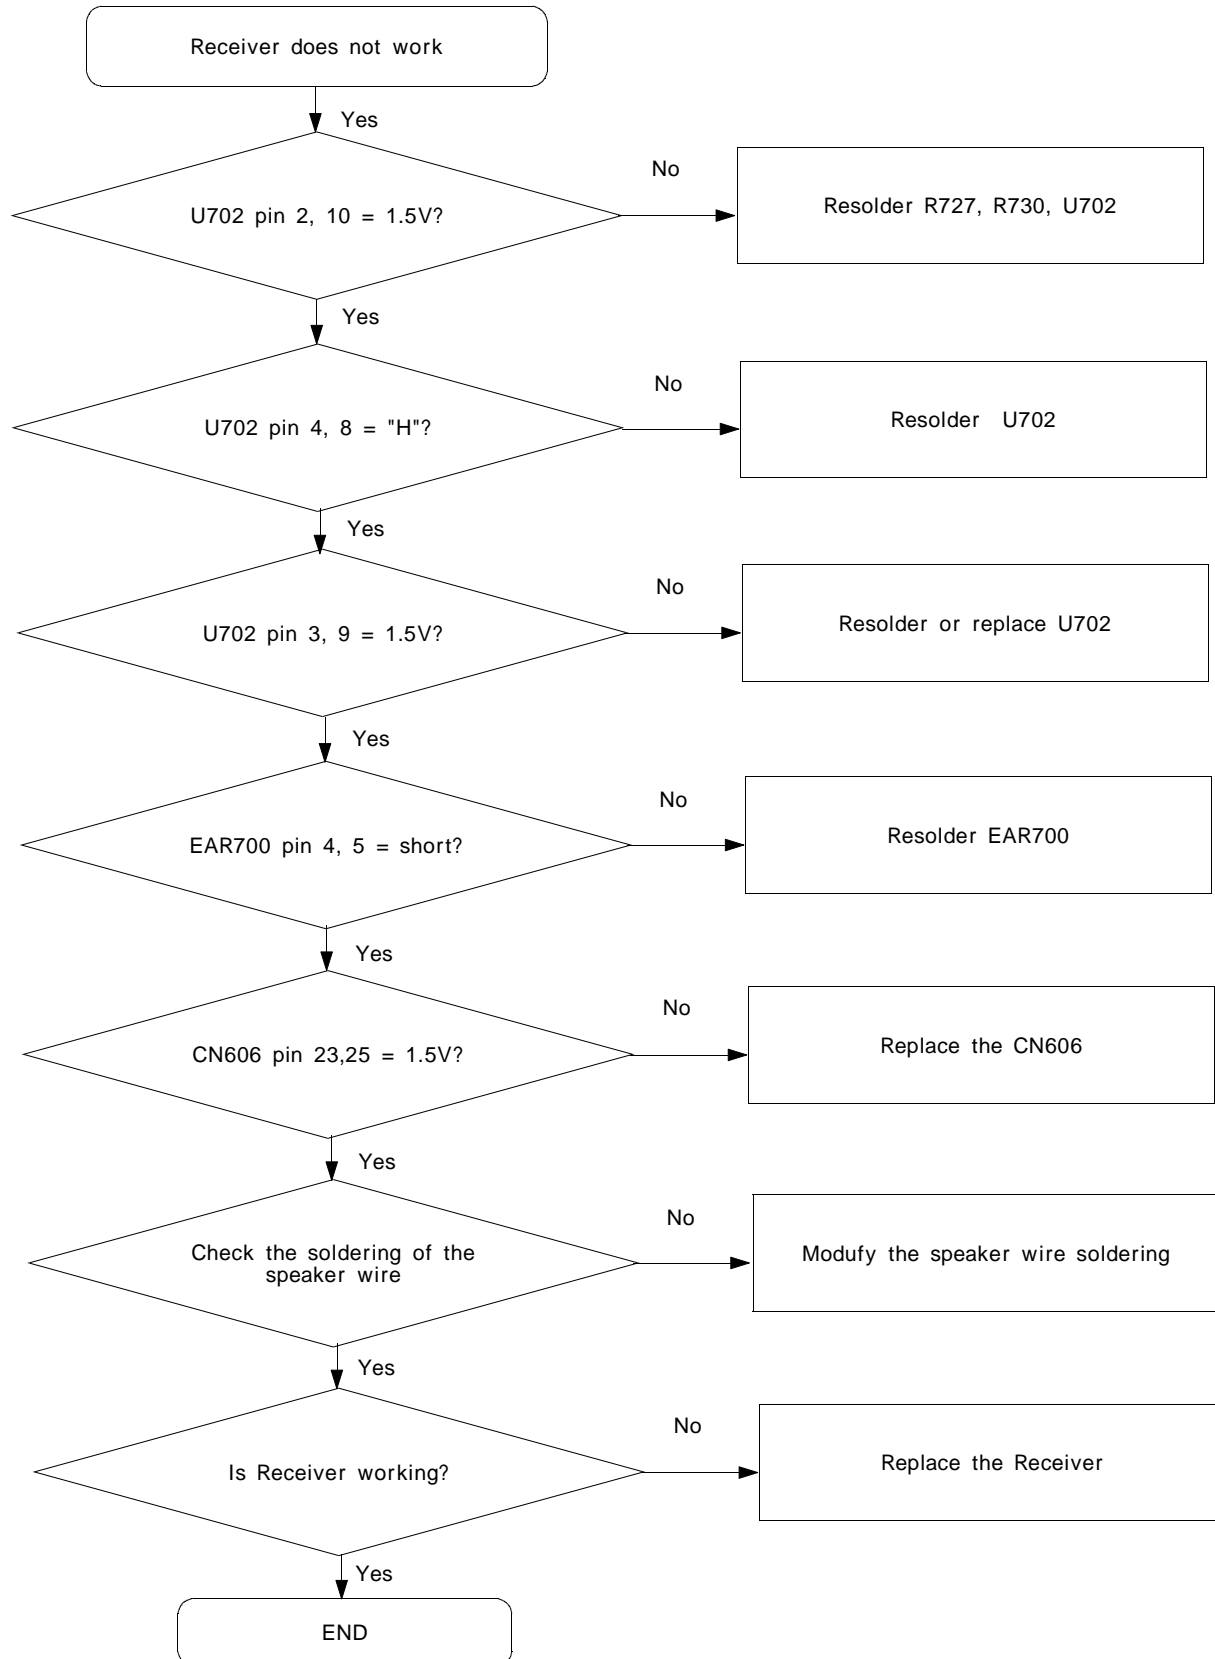


## 9. LCD Part

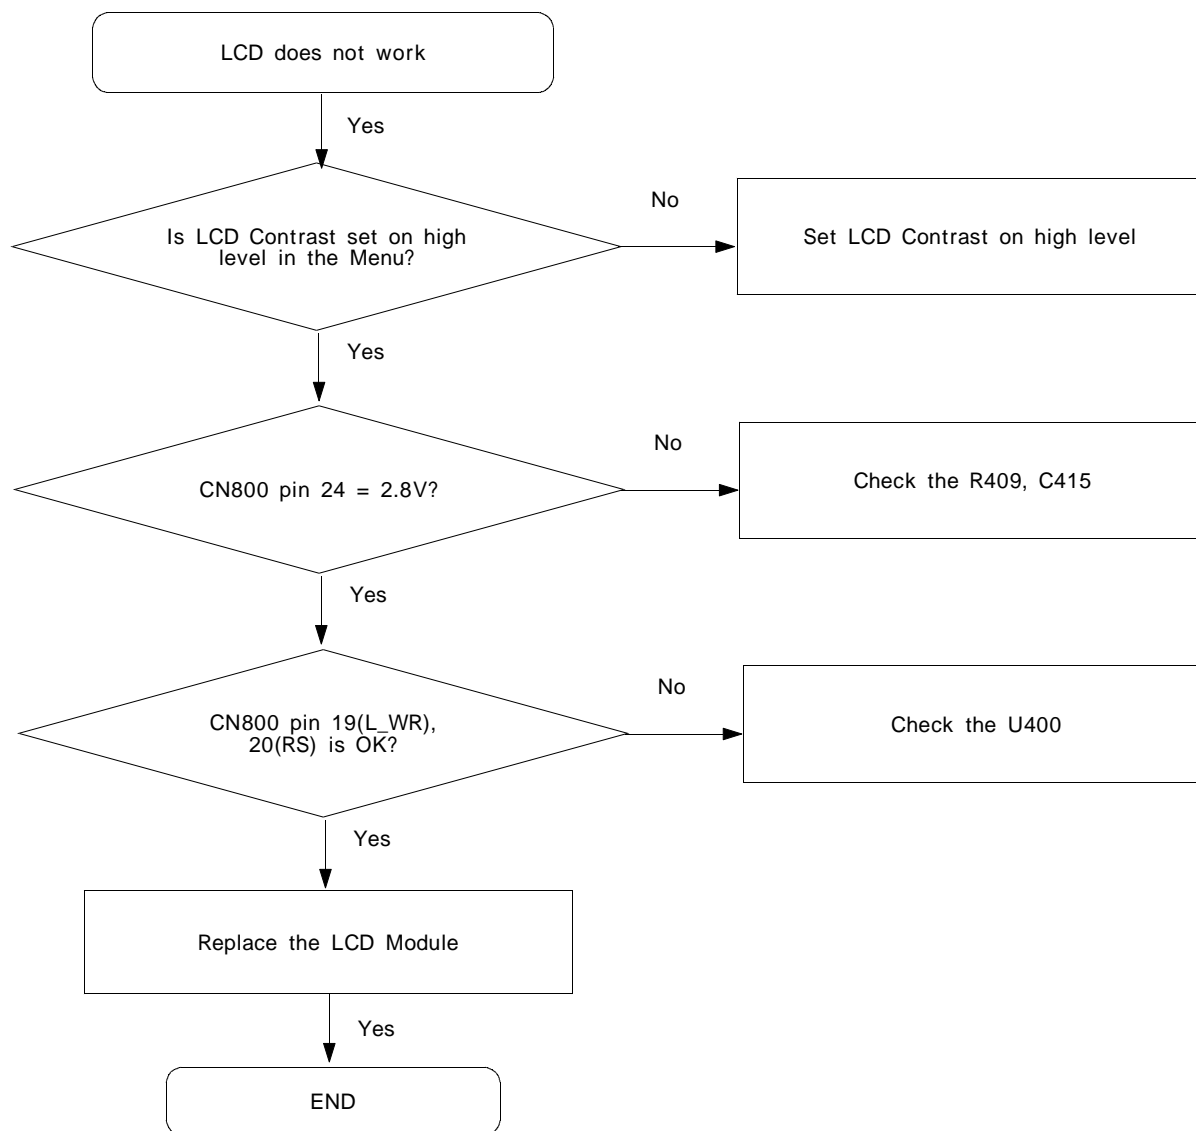


## 10. Key Back Light


### 1. Main Key Part

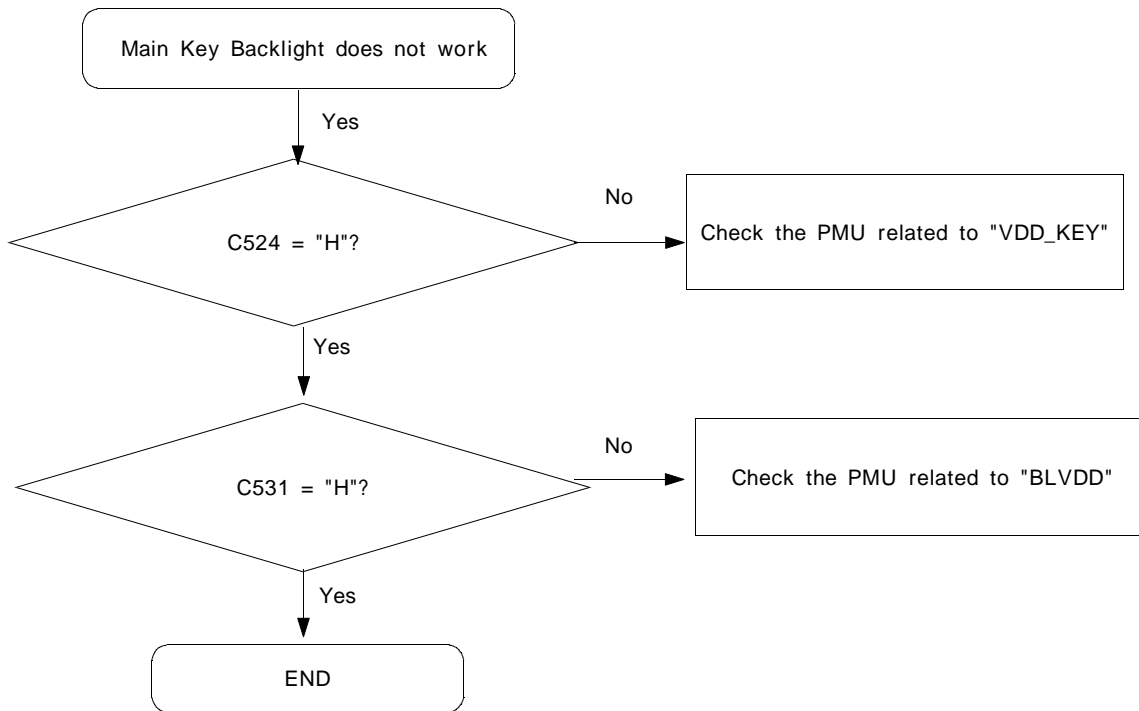

### 2. Sub Key Part

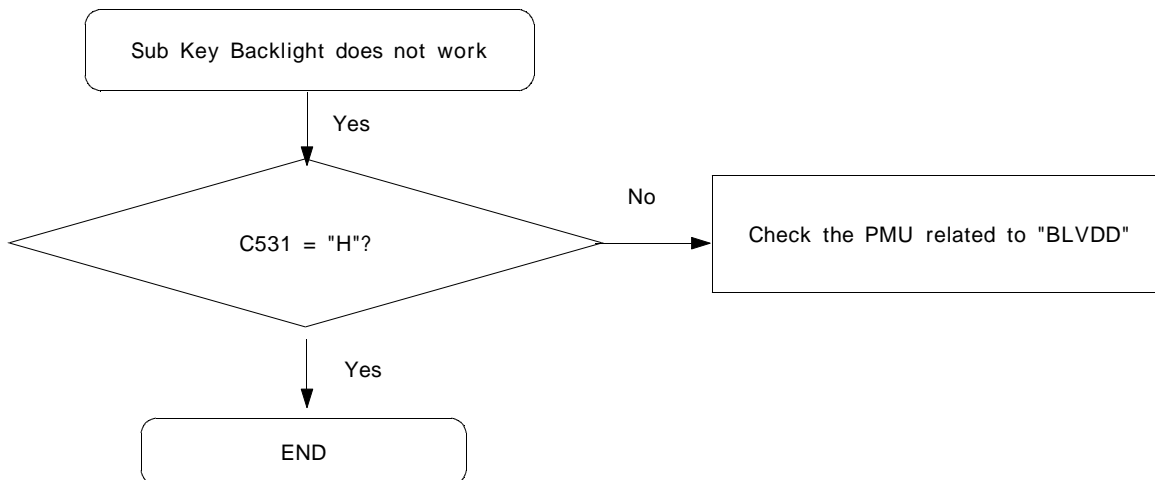


## 11. Camera part

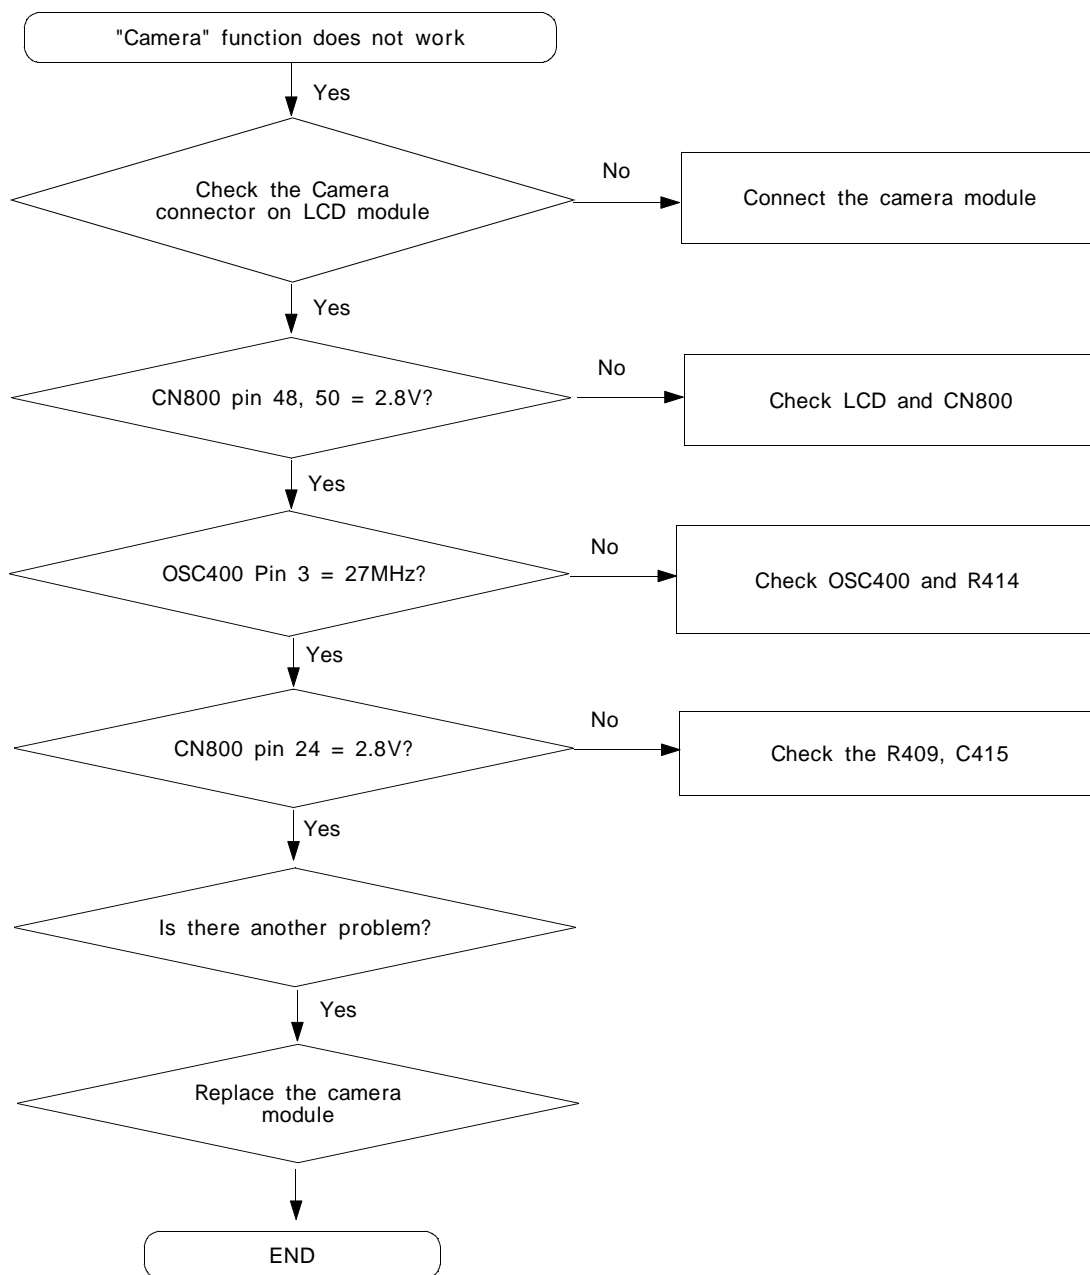





## 12. GSM Receiver

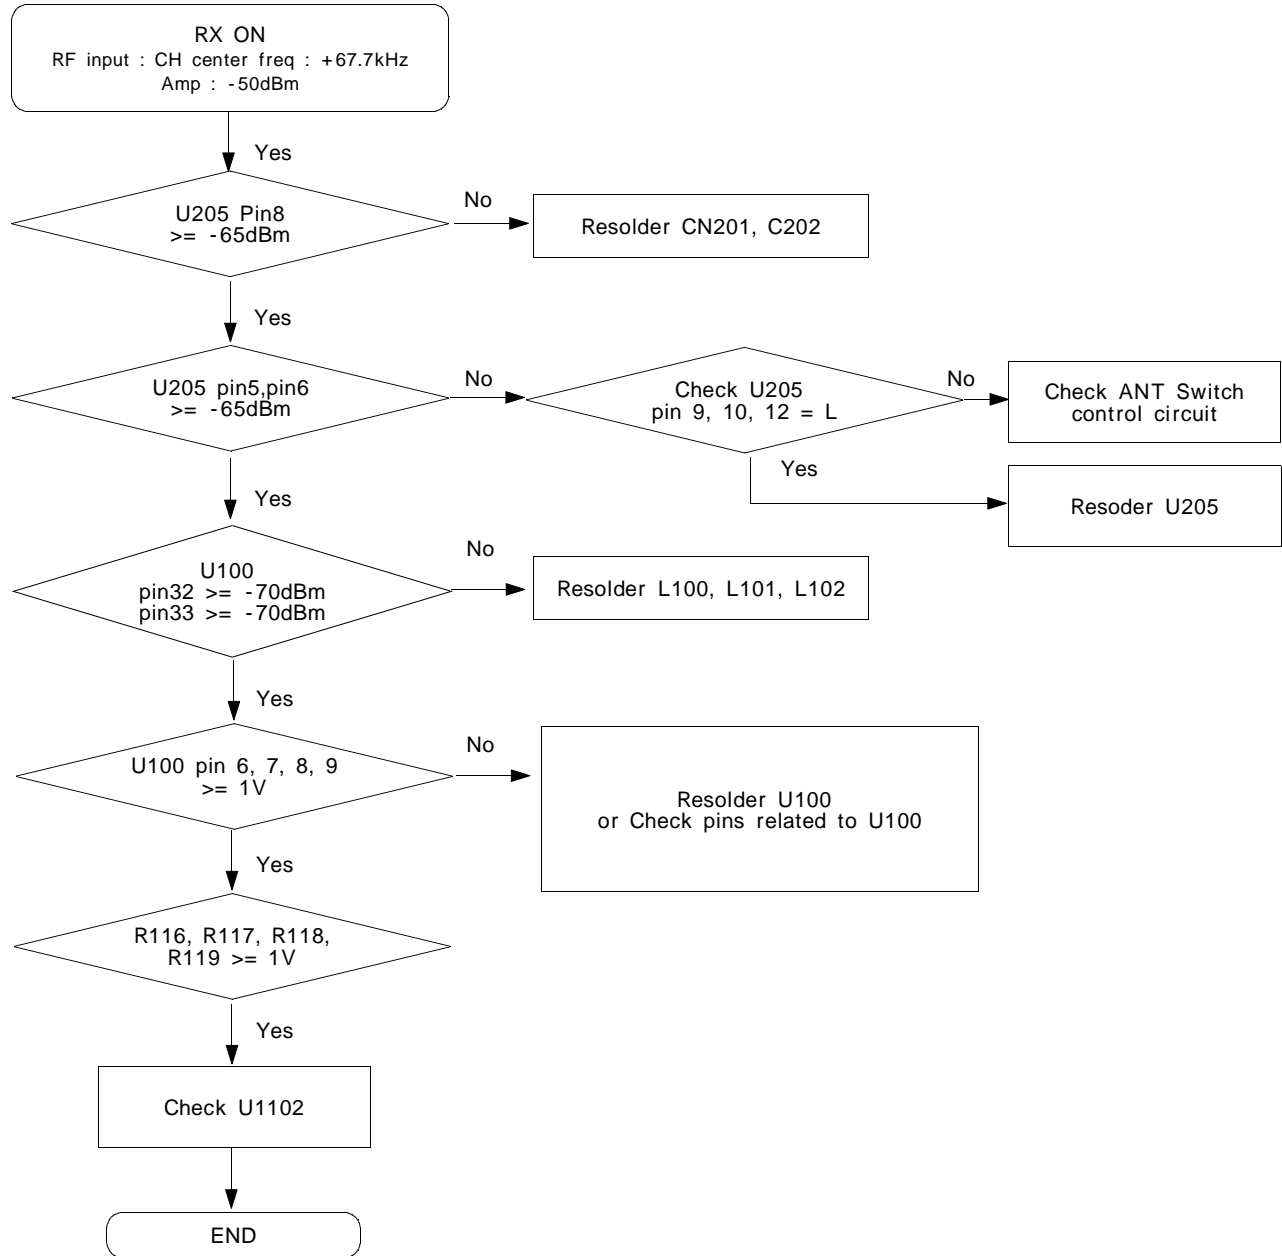


### 13. GSM Transmitter

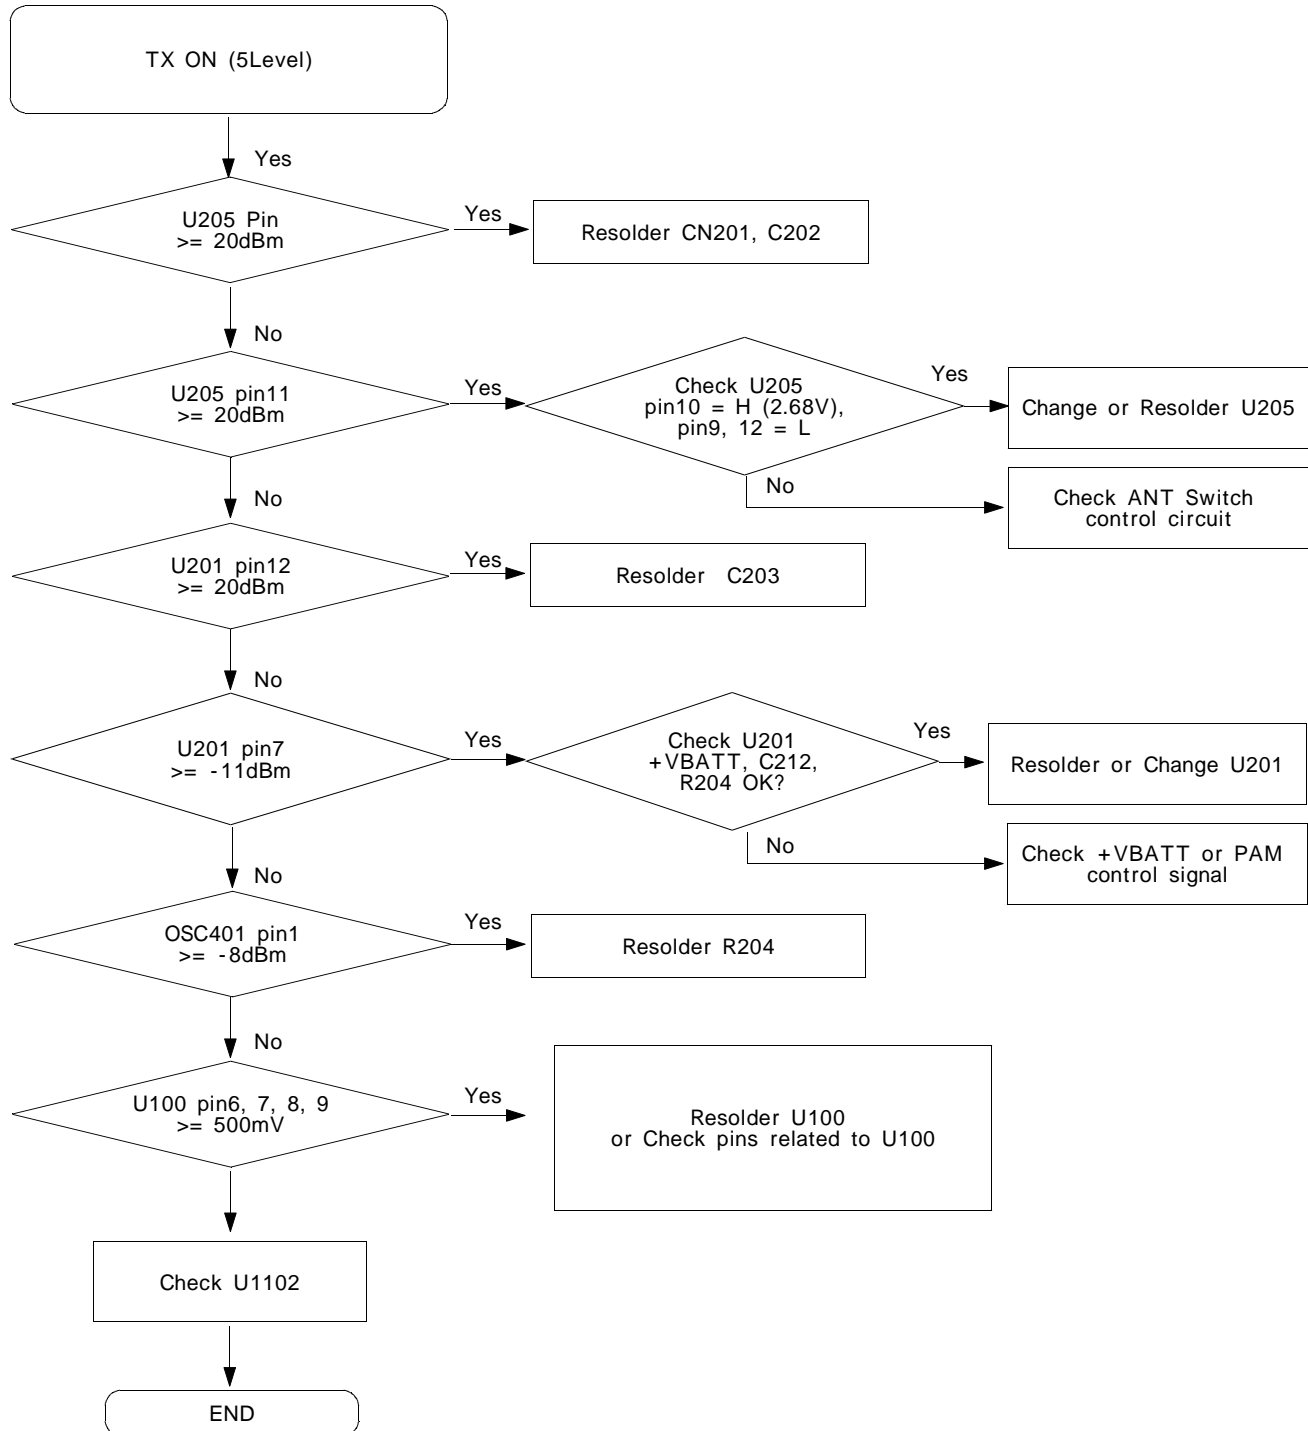


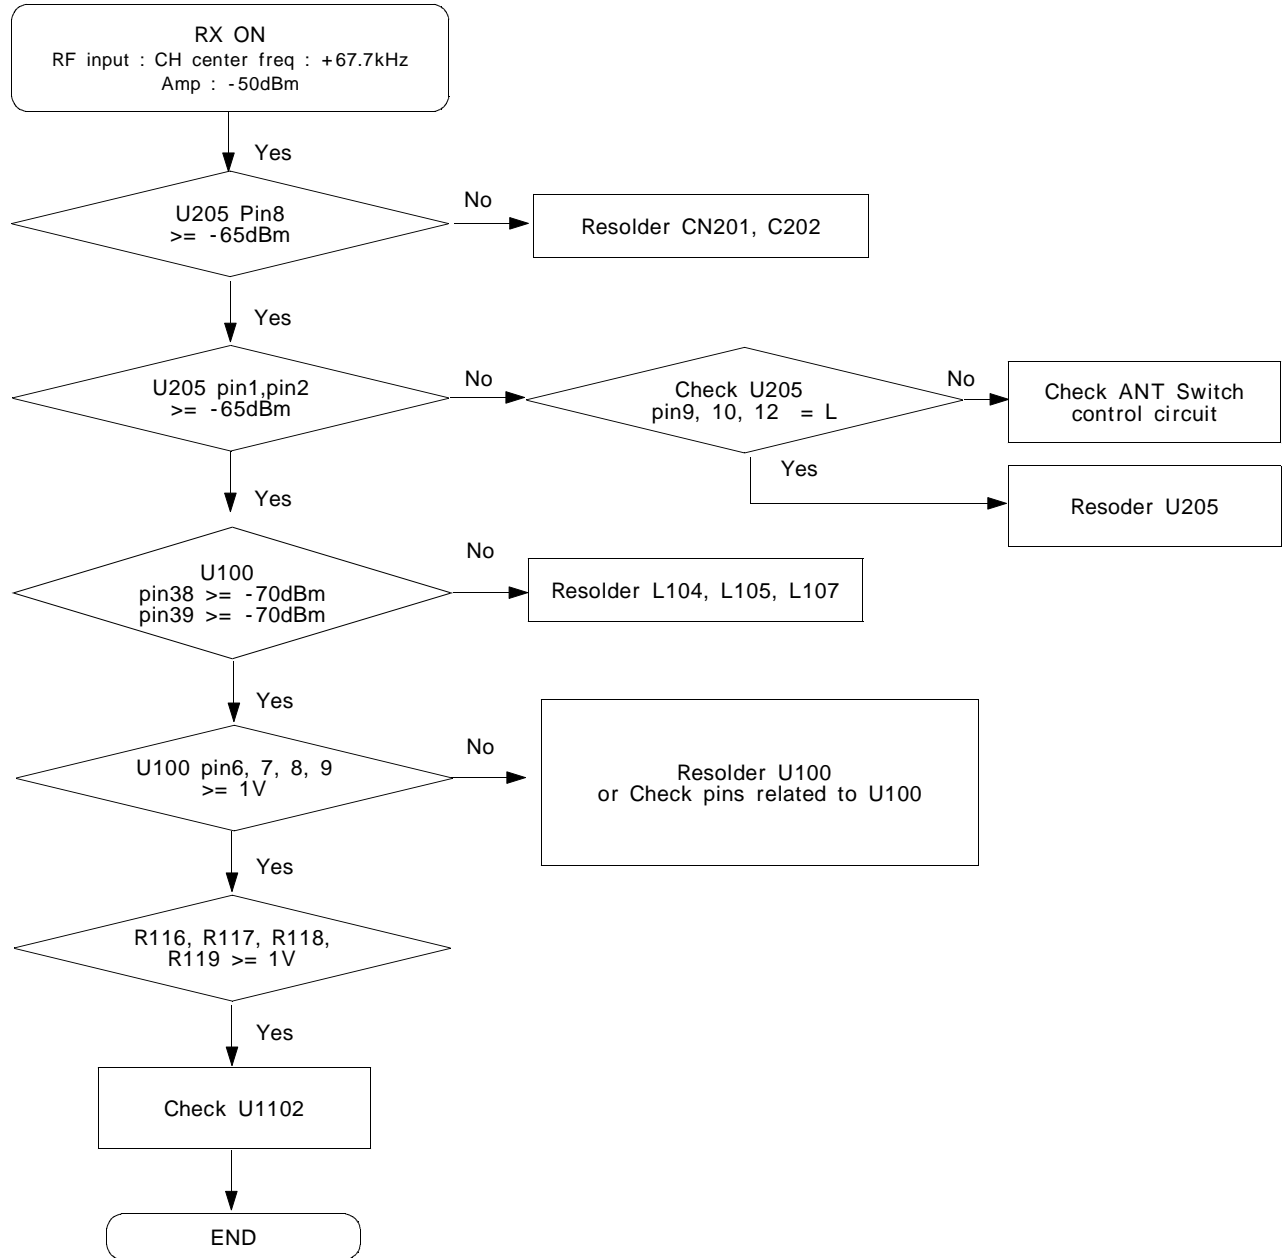**14. DCS Receiver**


## 15. DCS Transmitter

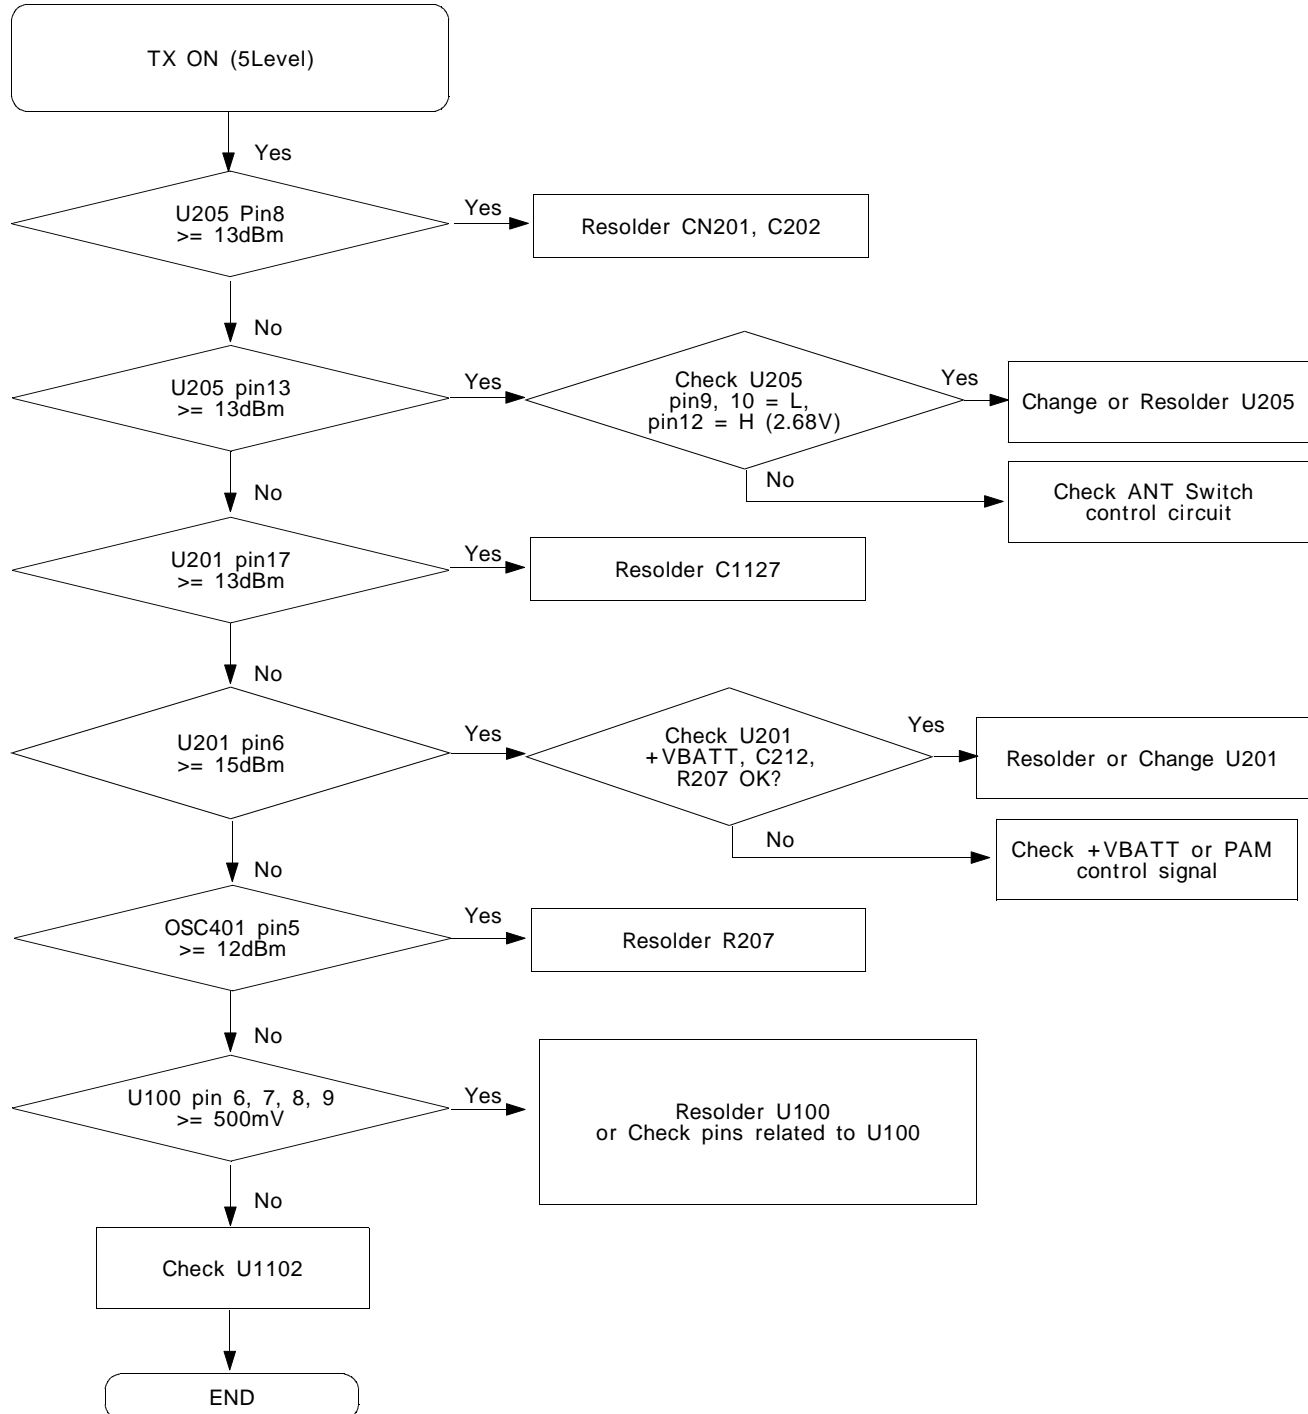

## 16. PCS Receiver

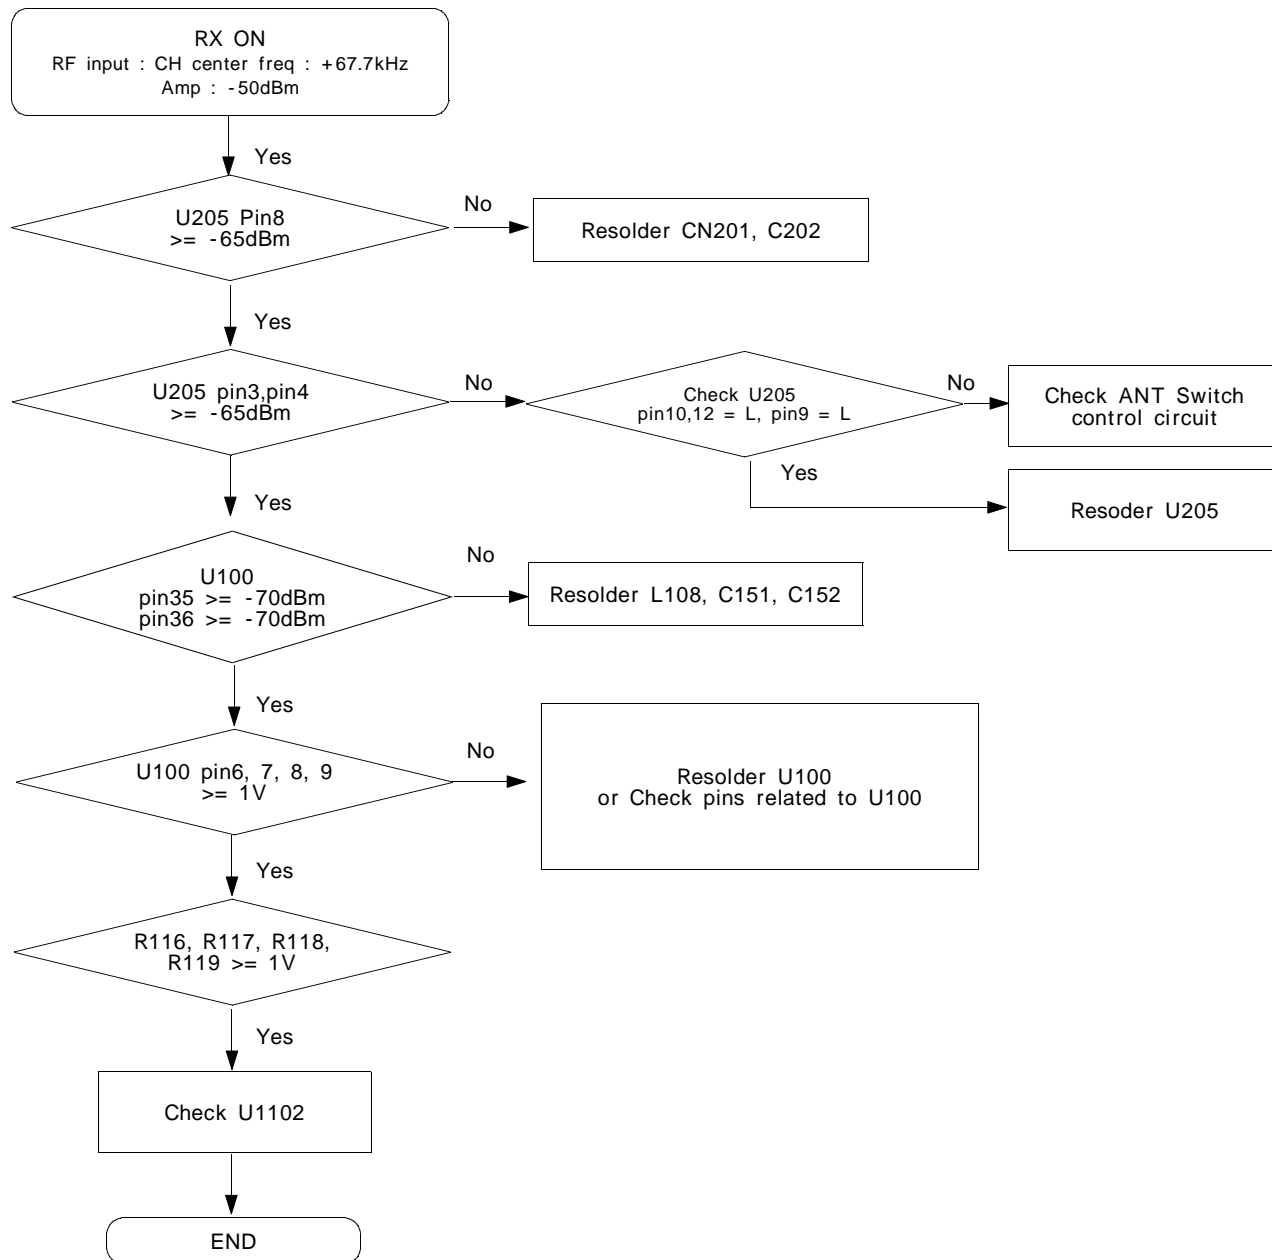

## 17. PCS Transmitter

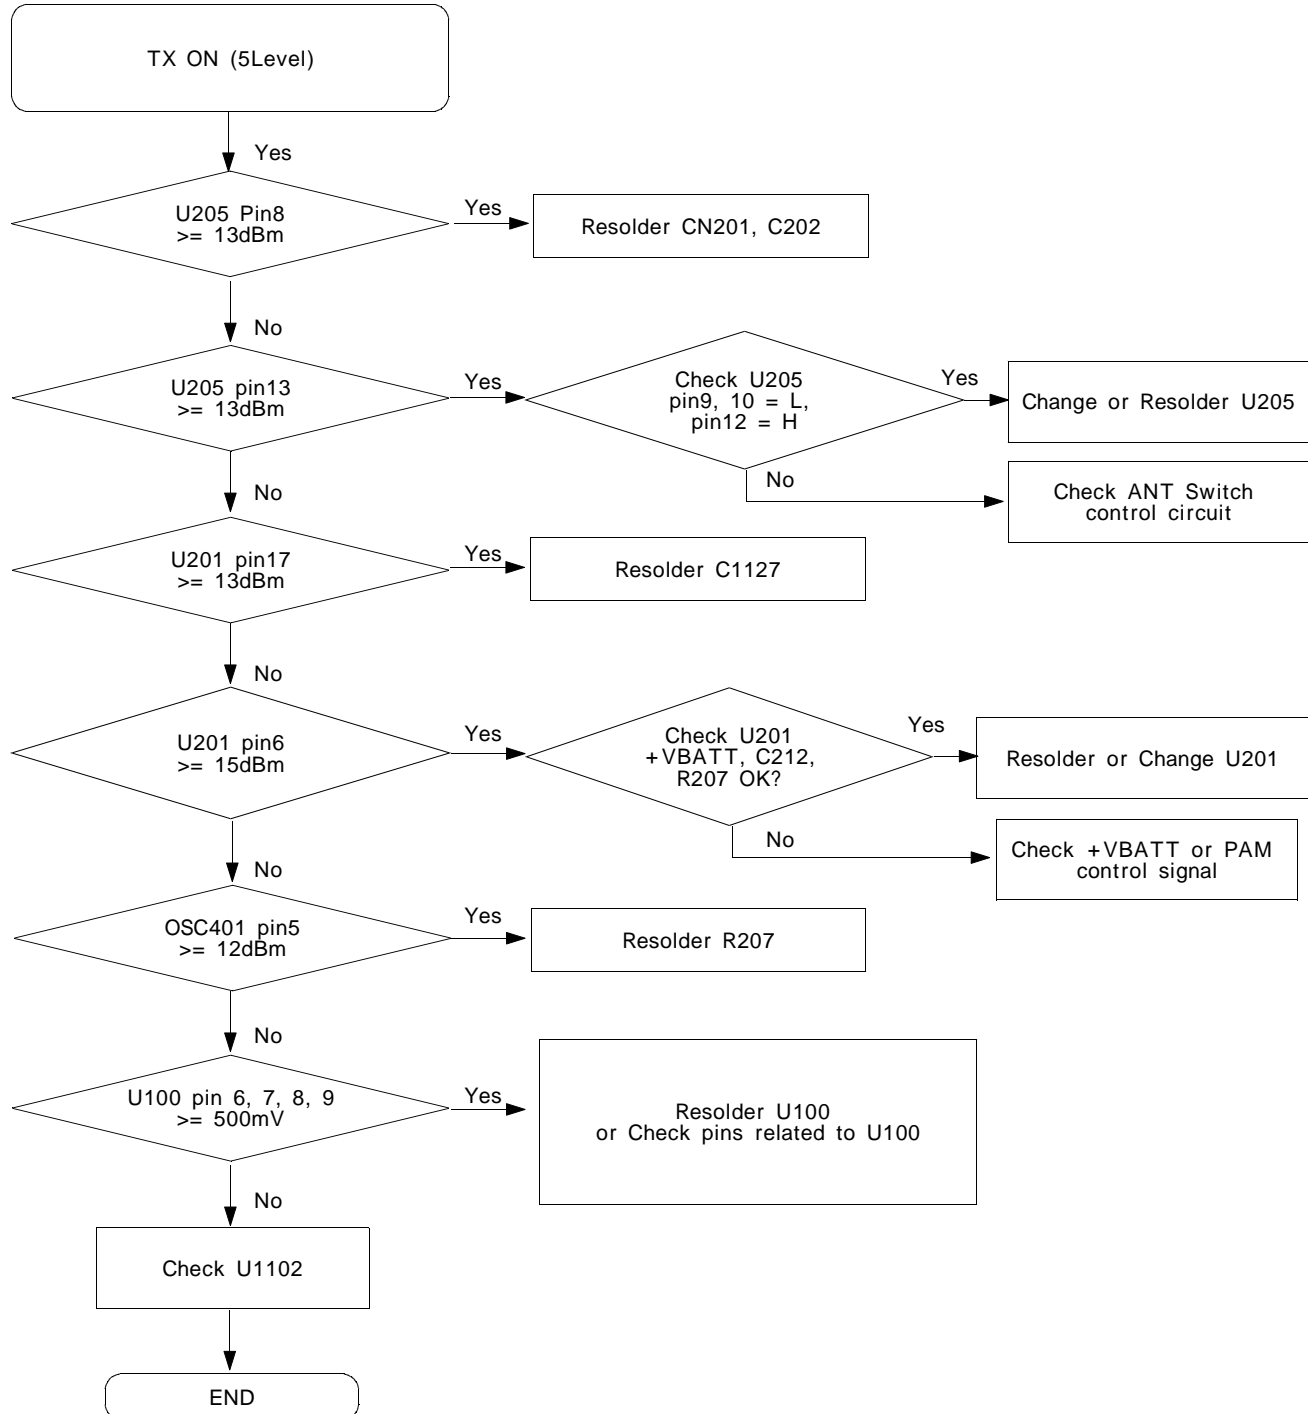

Transmitter

